



Float valve prevents overflow of the mains water

Mains water supply into header tank

AB air gap & overflow

Level sensors at the top and bottom of the tank

Rain water supply pipe

Feed pipe takes water from the tank to be used around the house